

INSTRUCTIONS FOR SERIES 50PM FLOWMETERS

THIS BOOKLET CONTAINS PROPRIETARY INFORMATION OF
ADVANCED SPECIALTY GAS EQUIPMENT CORP. AND IS PROVIDED
TO THE PURCHASER SOLELY FOR USE IN CONJUNCTION WITH
SERIES 50PM FLOWMETERS.

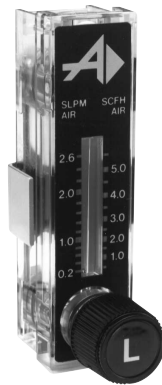

IMPORTANT

These instructions are for experienced operators who know the general principles and safety precautions to be observed in handling specialty gases and operating gas regulation equipment. If you are not certain you fully understand the safety precautions for handling gases, we urge you to obtain and read the Material Safety Data Sheet (MSDS) for each gas being used.

Do not permit untrained persons to install, operate, or maintain this flowmeter. Do not attempt to install or operate this flowmeter until you have read and fully understand these instructions. If you do not fully understand these instructions, contact your Advanced Specialty Gas Equipment Distributor.

Be sure this information reaches the operator. Your supplier has extra copies.



SAFETY PRECAUTIONS

Protect yourself and others. Read and understand the following instructions before attempting to use these flowmeters. Failure to understand and follow these instructions could result in serious personal injury and/or damage to equipment.

- Know and understand the physical and chemical properties of the gas being used.
- Observe general precautions for the use of gases.
- Observe safety precautions for the gas being used.
- Read and follow precautions on cylinder labels.
- Never use these flowmeters with gases not compatible with the materials of construction. The use of gases not compatible with the materials of construction may cause damage to equipment or injury to personnel.
- If flammable gases are used with these flowmeters, do not locate the flowmeters near open flames or any other source of ignition.
- If toxic or flammable gases are used with these flowmeters, emergency equipment applicable to the gases in use should be available in the operating area.
- Many gases can cause asphyxiation by displacing oxygen in the atmosphere. Make certain the area where flowmeters are operated is well ventilated. Provide a device to warn personnel of oxygen depletion in the work area.
- Do not release toxic or flammable gases in the vicinity of personnel. Use this equipment only in well ventilated areas. Vent gases to the outside atmosphere, and in an area away from personnel. Be sure that venting and disposal methods are in accordance with Federal, State and local requirements. Locate and construct vent lines to prevent condensation or gas accumulation. Be sure the vent outlet cannot be obstructed by rain, snow, ice, insects, birds, etc. Do not interconnect vent lines; if more than one vent is needed, use separate lines.
- Relief devices should be installed and properly vented in all gas handling systems to protect against overpressurization.
- Never use oil or grease on these flowmeters. Oil and grease are easily ignited and may combine violently with some gases under pressure.
- Never connect a flowmeter to a supply source having a pressure greater than the maximum rated pressure of the flowmeter. Refer to Product Specifications (page 8) for maximum inlet pressures.

MANUFACTURER STATEMENT

The information contained in this instruction booklet has been compiled by Advanced Specialty Gas Equipment Corp., (the Company), from what it believes are authoritative sources and is offered solely as a convenience to its customers. While the Company believes that this information is accurate and factual as of the date printed, the information including design specifications is subject to change without prior notice.

DESCRIPTION

The Series 50PM flowmeters are designed as a practical approach to low flow rate indication of noncorrosive gases or liquids at lowest possible cost. These flowmeters offer an economical means of measuring gas or liquid flow at low pressures where $\pm 10\%$ accuracy is acceptable. The metering tube for each flowmeter is molded directly into a clear, high impact polycarbonate plastic body. A direct reading scale for air in both standard liters per minute (slpm) and standard cubic feet per hour (scfh) at 70°F and 14.7 psia is provided on the meter body. A unique valve design allows bubble-tight shutoff. An integral bezel and threaded mounting screw permits either flush or front panel mounting.

INSTALLATION

WARNING: Before attempting to install and operate these flowmeters, read and fully understand the safety precautions on page 2 in this booklet. Make certain the gas you are using is compatible with the materials of construction. Failure to follow the safety precautions may result in serious personal injury and/or damage to equipment.

1. Inspect the flowmeter for physical damage or contamination. Flowmeters are shipped completely assembled and tested and should not require tightening or adjustment before installation.
2. Flowmeters must be mounted within 6 degrees of true vertical with the inlet connection to the flowmeter at the bottom. Be sure that piping is adequately supported to prevent undue strain on the flowmeter.
3. The built in metering valve provides flow control through the flowmeter. These control valves are designed for fine control. Although the valve will provide bubble-tight shutoff, excessive tightening may damage the valve seat and limit its effectiveness as a fine control valve. If tight shut-off is required, it is recommended that a separate shut-off valve be installed before the flowmeter.
4. The connections are provided with wrench flats so that fittings may be held firmly in place with an open-end wrench while a pipe or tube fitting is threaded into the connection fitting. Flexible tubing is recommended to avoid stress on the flowmeter body.
5. The flowmeter can be flush or front panel mounted. Each flowmeter is supplied with a U-shaped bracket to facilitate flush panel mounting. Insert the meter through the front of the panel into the cutout as shown in Fig. 3 (see pg. 10). To front panel mount the flowmeter, insert the meter through the front of the panel into the cutout as shown in Fig. 2 (see pg. 10). Use the mounting screw to fasten the flowmeter to the panel.

OPERATION

WARNING: DO NOT exceed pressure and temperature specifications during operation. Injury or death to personnel and/or damage to equipment may result. DO NOT operate the flowmeter under any circumstances if it is leaking or otherwise malfunctioning.

1. The flowmeter is ready for operation after it has been installed in the flow system and connections have been tested for leaks with nitrogen or air and either a soap solution, such as Snoop[®] or a gas leak detector. Do not exceed 100 psig during the leak test procedure. Vent all pressure from the system and repair any leaks before proceeding.
2. Gradually introduce gas or liquid into the flowmeter to prevent a pressure surge or thermal shock to the flowmeter. Do not exceed 100 psig during operation. Adjust the metering valve to obtain the desired flow rate. The scale reading at the center of the ball float should be read to obtain an accurate flow rate.

SHUTDOWN OR REMOVAL FROM SERVICE

1. Shut off the gas or liquid supply to the flowmeter. It should always be shut off when the system is not in use.

WARNING: Hazardous gases must be discharged into a safety vent. Be sure to use a venting procedure that is environmentally acceptable and complies with Federal, State and local requirements.

2. Vent the system to atmospheric pressure. If the flowmeter was used with a hazardous gas, purge the flowmeter and entire system with clean dry nitrogen gas. Continue purging until the hazardous gas level in the system is below the TLV for the gas.

DISASSEMBLY

1. Remove the flow control valve handknob with a hex wrench.
2. Remove the plastic retainer clip located at the top of the meter.
3. Slide the metal plate on the back of the meter upward until it stops. Remove the inlet and outlet connection fittings. The plate will lift out with the outlet connection fitting.
4. Remove the clean-out plug with integral float stop.
Note: Be careful not to drop or lose the ball float during disassembly. There are no replacement parts available.

REASSEMBLY

1. Use the reverse of steps 1 through 4 of the disassembly procedure to reassemble the meter.
2. After the flowmeter has been reassembled, it is important that it be leak tested with nitrogen or air and either a soap solution, such as Snoop[®] or a gas leak detector. Do not exceed 100 psig during the leak test procedure. Vent all pressure from the system and repair any leaks before proceeding.

MAINTENANCE AND REPAIRS

Periodically inspect the tube and float, and clean if necessary. Dirt or foreign materials adhering to the float or the inside of the tube may cause inaccuracy and sticking of the float.

Carefully clean the metering tube with a pipe cleaner or similar soft material using a mild soap and water solution. Do not use any object which may scratch the inside of the tube, or accuracy of readings may be affected. Never use a cleaning fluid or solvent.

There are no replacement parts available for the Series 50PM flowmeter. It is recommended that users keep a second unit on hand as a replacement.

Warranty Repairs are only available through Advanced Specialty Gas Equipment Corp., and will be performed at no charge for parts and labor. For information on warranty, see the last page of this instruction booklet.

Non-Warranty Repairs are available through your distributor. Upon receipt at the factory, the flowmeter will be inspected and you will be contacted by your distributor with a repair cost estimate. No item will be repaired until approval is received. There will be an evaluation charge assessed for equipment not repaired.

CALIBRATION

Flowmeters are calibrated using Air at normal temperature (70°F) and pressure (14.7 psia) to an accuracy of ±10% of full scale from 10% to 100% of range. Approximate flow rates for other gases or conditions can be mathematically derived using the following flowmeter conversion formulas.

Note: These are approximate flow corrections; if precise flow corrections are required, on site calibration of the flowmeter should be performed.

$$\text{Gas Conversion Factor} = \sqrt{\frac{1}{\text{Specific Gravity of Process Gas}}}$$

$$\text{Pressure Conversion Factor} = \sqrt{\frac{\text{Actual Operating Pressure in psia}}{14.7 \text{ psia}}}$$

$$\text{Temperature Conversion Factor} = \sqrt{\frac{530}{\text{Actual Temperature in } ^\circ\text{F} + 460}}$$

Determine the corrected flow rate by multiplying the flow reading obtained by one, two and/or three of the conversion factors calculated above.

$$\text{Flow Reading} \times \text{Gas Factor} \times \text{Pressure Factor} \times \text{Temperature Factor} = \text{Corrected Flow Reading}$$

EXAMPLE: To calculate corrected flow reading for Argon at the following conditions.

The **Flow Reading** from the tube calibrated for Air at NTP is 3.0 scfh.

The **Gas Conversion Factor** is calculated for Argon. (Specific gravity of Argon at 70°F (Air=1) is 1.378)

$$\sqrt{\frac{1}{1.378}} = 0.85$$

The **Pressure Conversion Factor** is calculated for a pressure of 30 psia through the flow tube. (Measured at outlet of flowmeter)

$$\sqrt{\frac{30 \text{ psia}}{14.7 \text{ psia}}} = 1.43$$

The **Temperature Conversion Factor** is calculated for a gas temperature of 60°F.

$$\sqrt{\frac{530}{60^\circ\text{F} + 460}} = 1.01$$

$$3.0 \text{ scfh} \times 0.85 \times 1.43 \times 1.01 = 3.7 \text{ scfh}$$

Flow Reading Gas Factor Pressure Factor Temperature Factor Corrected Flow Reading

SPECIFICATIONS

Maximum Operating Pressure and Temperature	100 psig at 130°F
Minimum Operating Temperature	32°F
Accuracy	±10% of full scale from 10% to 100% of range.
Repeatability	Within 1% of full scale
Tube Graduations	Standard liters per minute (slpm) and standard cubic feet per hour (scfh) of air.
Scale Length	37 millimeters
Available Ranges	See Table 1
Inlet and Outlet Connections	½ in. NPT female
Weight (approx.)	0.25 lb.

MATERIALS OF CONSTRUCTION

Body and Tube	Polycarbonate Plastic
Float	See Table 1
Connection Fittings	Type 316 Stainless Steel
Valve	Type 316 Stainless Steel
Seals	Viton®

Table 1

Part No.	Float Material	Actual Graduations (Air Flow Rate Range at 70°F and 14.7 psia)	
		scfh	slpm
FM4491	Glass	0.3 – 3.0	0.15 – 1.5
FM4492	316 Stn. Stl.	0.5 – 5.5	0.25 – 2.5
FM4493	Glass	1.0 – 10.0	0.50 – 5.0
FM4494	316 Stn. Stl.	2.0 – 20.0	1.00 – 10.0
FM4495	Glass	5.0 – 50.0	2.50 – 25.0
FM4496	316 Stn. Stl.	10.0 – 100.0	5.00 – 50.0

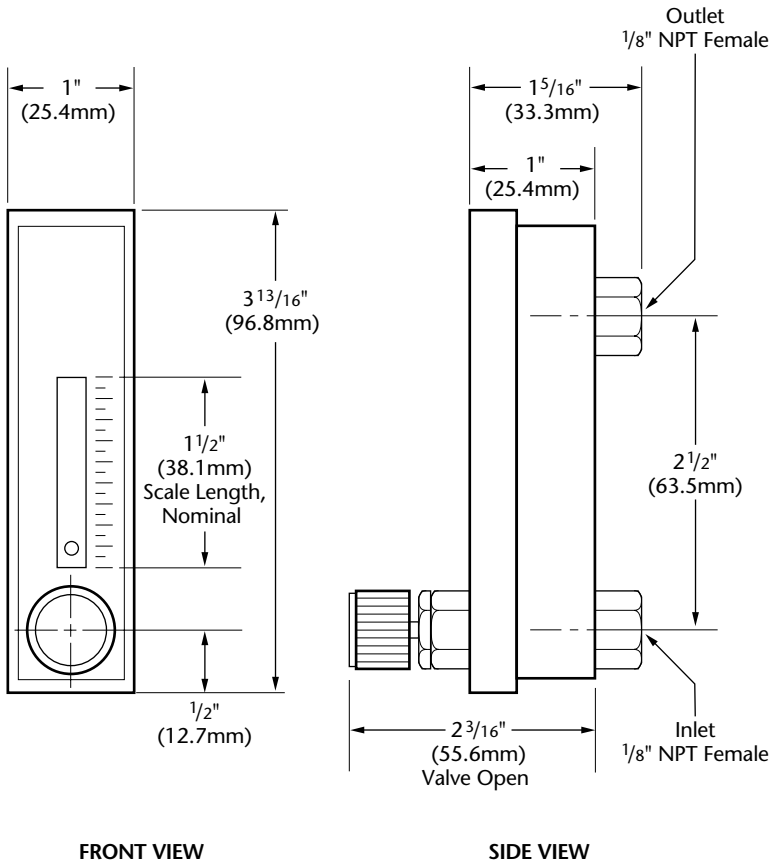


Figure 1 – Series 50PM Flowmeter Dimensions

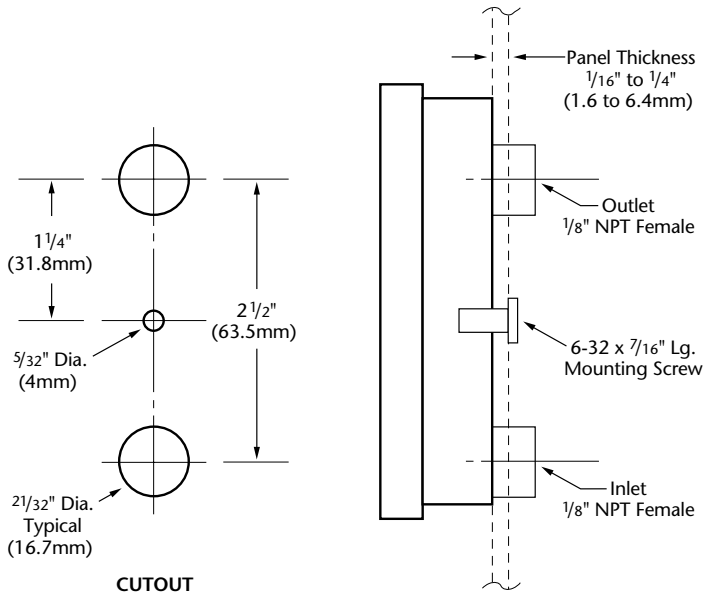


Figure 2 – Front Panel Mounting, Series 50PM Flowmeter

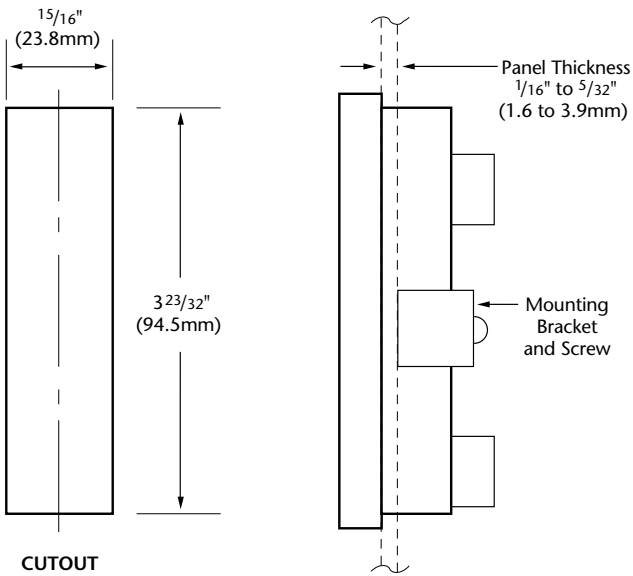


Figure 3 – Flush Panel Mounting, Series 50PM Flowmeter

WARRANTY

Advanced Specialty Gas Equipment Corp.,(the Company), warrants to the initial purchaser of each flowmeter described herein, that such equipment will be free from defects in material and workmanship which result in breakdown or failure under normal use during a period of 12 months from date of shipment by the Company if used and maintained according to Advanced Specialty Gas Equipment written instructions. This warranty does not cover damage or malfunction due to corrosion. Purchaser is aware that this equipment is designed for specific applications and that using this equipment with the wrong or improperly purged gas or at the wrong pressure may damage or corrode the unit and cause personal injury. Purchaser must confirm that this equipment is compatible with the gas being passed through it. If there is any doubt about compatibility, consult your Advanced Specialty Gas Equipment Corp. distributor.

The Company's liability under this warranty shall be limited to the repair, or at its option, replacement or refund of the purchase price, of such equipment which proves to be defective, provided; however, that this warranty shall only apply if the purchaser (1) gives the Company written notice within ten (10) days after discovery of such defect, (2) immediately on discovery of the claimed defect, discontinues all use of such equipment, and (3) returns such equipment freight prepaid to plant of manufacture.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE SPECIFIED HEREIN. NO WARRANTIES BY ADVANCED SPECIALTY GAS EQUIPMENT CORP.(OTHER THAN WARRANTY OF TITLE AS PROVIDED IN THE UNIFORM COMMERCIAL CODE) SHALL BE IMPLIED OR OTHERWISE CREATED UNDER ANY APPLICABLE LAW, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY AND WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. No claim against the Company of any kind, whether as to equipment delivery or for nondelivery of equipment and whether or not based on contract, warranty, negligence, strict liability in tort or otherwise, shall be greater in amount than the purchase price of the equipment in respect of which such claim is made. Without limiting the generality of the foregoing, Advanced Specialty Gas Equipment Corp. shall not be liable for any special, indirect, or consequential damage, such as failure of parts resulting from corrosion.

If it is determined by Advanced Specialty Gas Equipment Corp. that the equipment is to be repaired or replaced under the terms of this warranty, the cost of returning said equipment to the initial purchaser will be paid by the Company. If, however, equipment returned to the Company in connection with a claim under this warranty is found by the Company not to be defective hereunder, then such equipment will be returned to the initial purchaser, shipping charges collect, and additionally, a service charge will be paid by the purchaser to the Company to cover the cost of handling and testing such equipment.



241 Lackland Drive, Middlesex, NJ 08846
Phone: 732-271-9300 Fax: 732-271-1630 www.asge-online.com